
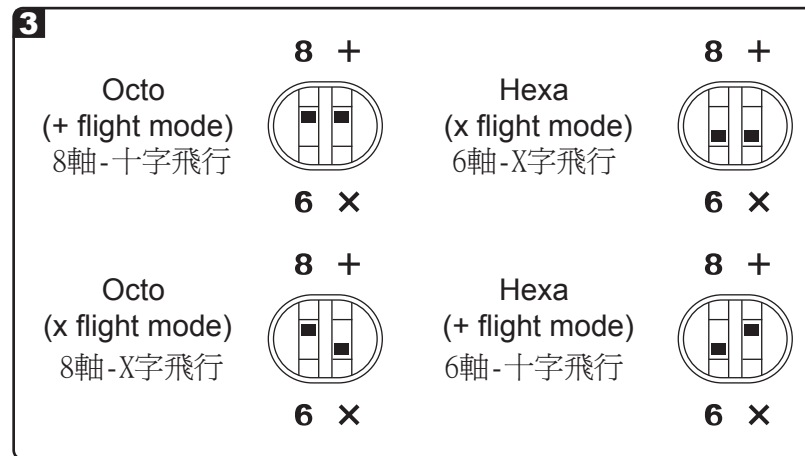
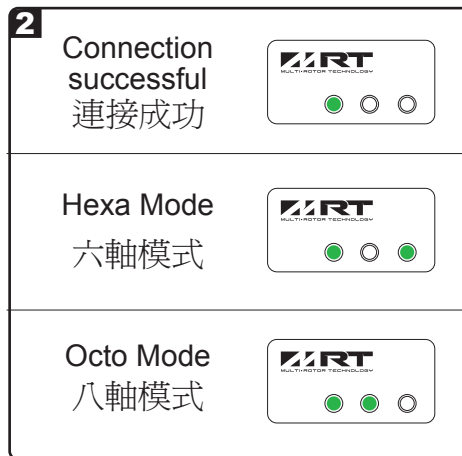


USB connection for Firmware update (same USB cable as included in GU-INS).  
軟體更新插孔(傳輸線材同GU-INS)

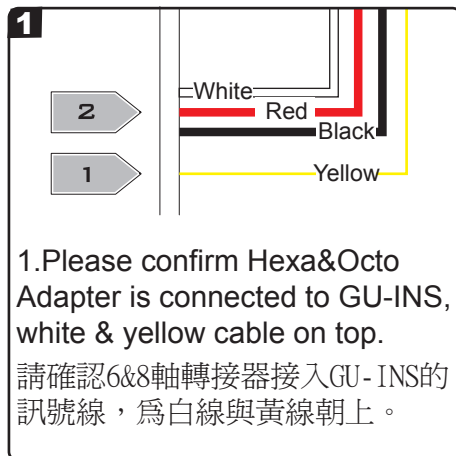

2. Confirm GU-INS and (Hexa & Octo adapter) connection is successful (indicated by GREEN LED light).

RED LED light indicates unsuccessful connection. After successful connection additional LED light will indicate DIP switch selection.

請確認GU-INS與6&8軸轉接器連接成功(綠燈)反之紅燈，連接成功後會顯示目前DIP撥鈕燈號。

3. Adjust DIP switches to the flight mode needed and double check the LED light indications are correct.

調整DIP撥鈕至所需的飛行模式並確認顯示燈號，同DIP撥鈕位置。

4. When using the Hexa & Octo Adapter, confirm that the GU-INS firmware has been updated to GU-INS\_X1.3

(location of firmware update: <http://tshgaui.com.tw/shop/downloads.html?catid=7> )

使用6&8軸轉接器時，請確認GU-INS的軟體已更新為 GU-INS\_X1.3 以上(更新檔位置:<http://www.tshgaui.com.tw/shop/downloads.html>)。